

User manual and safety information

Version 3, 15 October 2026

Please read this manual before you book and before you use the telephone. A printed copy comes with the telephone, and it can also be read at juhlapuhelin.fi/kayttoohje.

What the telephone is

The telephone is an audio guestbook: a restored vintage landline telephone that guests at your event leave a message on. A guest lifts the handset, hears the greeting and speaks after the tone. The message is saved when the guest hangs up.

The telephone is intended for use indoors at parties and other events. It is not intended for any other use.

Manufacturer and markings

- Manufacturer: Devved Oy (business ID 3280643-9), Kerppukuja 1 A 2, 20760 Piispanristi.
- The telephone carries the CE marking. As its manufacturer, we have made sure that it meets the EU requirements that apply to it, including those on electromagnetic compatibility (EMC) and the restriction of hazardous substances (RoHS).
- The telephone's type and serial number are on its label.
- Input: 5 V DC (direct current), from the power supply that comes with it.

Use

The telephone runs on mains power. Keep it plugged in with the power supply that came with it for the whole event.

Always put the handset back properly. If it is left askew, the telephone keeps recording an empty room.

Safe use

- Use the telephone only indoors and in a dry place.
- Never use the telephone when it is wet, near liquids or outdoors. Keep drinks away from it.
- Place the telephone on a stable, level surface.
- Route the cables so that nobody can trip over them. Do not run cables across walkways.
- Do not cover the telephone or the power supply. Do not place them near a source of heat, such as a candle or a radiator, or in direct sunlight.
- Children may use the telephone only under adult supervision, because the handset cord can wrap around the neck.
- Do not use the device under the influence of alcohol or any other intoxicating substance.
- Do not use the telephone if it or the power supply is damaged.
- Do not open, repair or modify the telephone. Repairs to electrical equipment belong to electrical professionals, and only we service the telephone.

Power supply

The power supply is the charger and cable that come with the telephone.

- Use only the power supply that came with it. Another charger or cable can damage the telephone or make it overheat.
- The charger is for indoor use. Plug it into an undamaged socket that is easy to reach.
- Do not use the charger if the charger, the cable or the plug is damaged.
- Unplug the charger by holding the plug, not by pulling the cable.
- The charger can get warm while in use, which is normal. If it gets too hot to touch, unplug it.
- Return the power supply together with the telephone.

If the telephone smokes, smells or gets hot

1. Unplug the power supply as soon as it is safe to do so.
2. Stop using the telephone.
3. Tell us about it.

Do not try to repair the telephone yourself.

Cleaning

Unplug the power supply before cleaning. Wipe the telephone with a dry or slightly damp cloth. Do not use cleaning products or sprays, and do not let water get inside the telephone.

Reporting a fault

If the telephone has a fault or a safety problem, tell us by email at info@juhlapuhelin.fi or by phone on 040 505 6628. Give your order number, the serial number on the telephone's label and what happened.

We inspect every telephone before it is rented again, and we use the reports to make our rentals safer.

Disposal

The telephone carries the crossed-out wheeled bin symbol: electrical and electronic equipment must not be thrown away with household waste. Never dispose of the telephone yourselves, in any situation. The telephone is always returned to the lessor (Devved Oy, juhlapuhelin.fi), even when it is broken. The lessor sees that the device is disposed of properly.